



The DWC accurately reacts to an increase of temperature created by:

- Condensate from the LIVESTEAM Steam Trap(s).
- Condensate from the SAM-e Distributor.


NOTE: The DWC Self Actuated is pre-set at the factory.

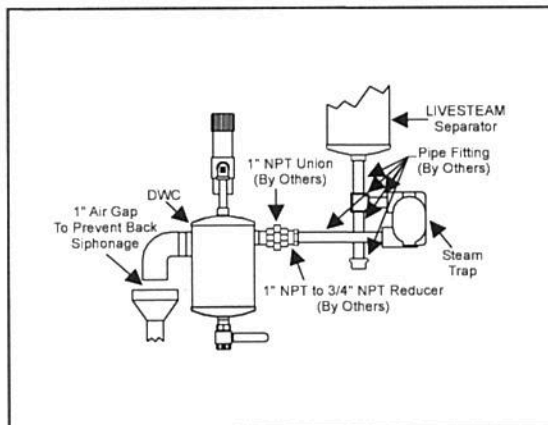

Installation With LIVESTEAM

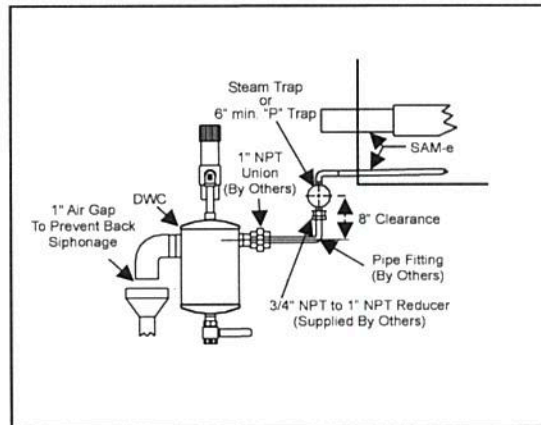

Installation With SAM-e

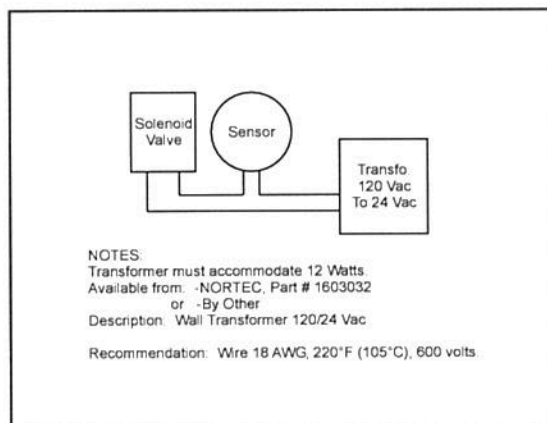

Schematic For Electrical DWC

## MAINTENANCE

Once a year, it is recommended to perform the following steps:

- 1) Shut down the source of hot water.
- 2) Drain the DWC by opening the 3/4" Ball Valve.
- 3) Disassemble the DWC from the hot water source.
- 4) Rinse the DWC with water added through the Blended Water Outlet.
- 5) Clean the Hot Water Inlet Tube with a 3/8" diameter fine brush, at the entry and through the 3/4" Ball Valve.
- 6) Re-assemble the DWC.
- 7) Re-connect the hot water source.

DWC units are covered under standard NORTEC 2 year limited warranty.