

## Filter Foam Only, Replacement - Installation Instructions




### **CAUTION: SERVICING**

- DISCONNECT MAIN POWER SOURCE BEFORE ACCESSING INTERNAL COMPARTMENTS.
- THE PLUMBING AND ELECTRICAL COMPARTMENTS CONTAINS HIGH VOLTAGE COMPONENTS AND WIRING. ACCESS SHOULD BE LIMITED TO AUTHORIZED PERSONNEL ONLY.
- DURING AND FOLLOWING OPERATION OF THE HUMIDIFIER, THE STEAM COMPONENTS IN CONTACT WITH THE STEAM CAN BECOME HOT AND BURN IF TOUCHED.
- CONDAIR DOES NOT ACCEPT ANY LIABILITY FOR INSTALLATIONS OF HUMIDITY EQUIPMENT INSTALLED BY UNQUALIFIED PERSONNEL OR THE USE OF PARTS/ COMPONENTS/ EQUIPMENT THAT ARE NOT AUTHORIZED OR APPROVED BY CONDAIR.

### **Step 1 – Power Disconnected**


**DISCONNECT MAIN POWER SOURCE AT EXTERNAL DISCONNECT BEFORE ACCESSING INTERNAL COMPARTMENTS.**

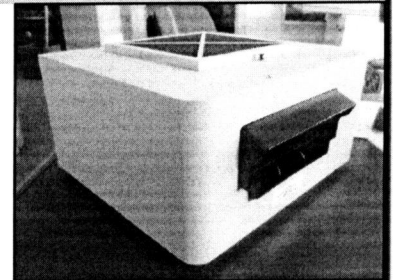

### **Step 2 – Filter Removal**

Pull black plunger up to disengage locking mechanism.

Tilt filter frame up from the cover and pull out the used foam filter.

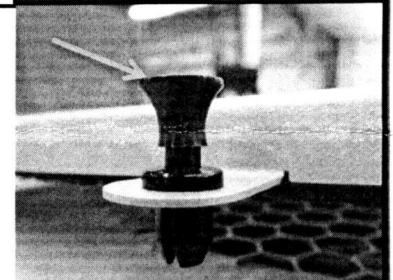


### **Step 3 – Filter Replacement**


Replace with new filter foam.

Tilt filter frame down to the cover with the filter foam within the frame.

Push black plunger down to engage locking mechanism.

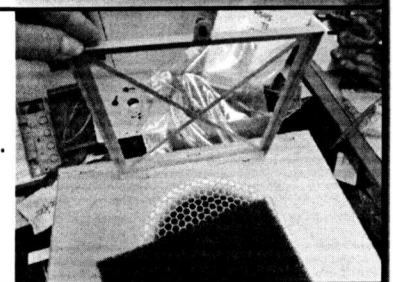

**Warning: Risk of Electrical Shock From Energy Stored In Capacitors**

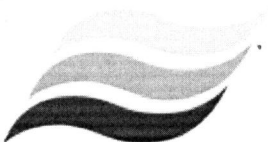

Filter Foam Only, Replacement

Installation Instructions – Page 1 of 1

2579671

Revision B

Date: 21/11/2018