

End Cap - Installation Instructions



CAUTION: SERVICING

- DURING AND FOLLOWING OPERATION OF THE HUMIDIFIER, THE STEAM COMPONENTS IN CONTACT WITH THE STEAM CAN BECOME HOT AND BURN IF TOUCHED.
- NORTEC DOES NOT ACCEPT ANY LIABILITY FOR INSTALLATIONS OF HUMIDITY EQUIPMENT INSTALLED BY UNQUALIFIED PERSONNEL OR THE USE OF PARTS/ COMPONENTS/ EQUIPMENT THAT ARE NOT AUTHORIZED OR APPROVED BY NORTEC.

Step 1: Preparing the Distributor

- a) Power the humidifier Off.
- b) Allow the distributor to cool before performing any work.
- c) Uncouple the steam supply line and condensate drain hose from the distributor.
- d) Unbolt the mounting plate from the air ventilation system and remove the distributor tube from the ventilation system.

Step 2: Install the new End Cap

- a) Loosen the existing screws securing the end cap and remove the old end cap.
- b) Press the new end cap into the open tube end.
- c) Tighten the three end cap screws evenly until the cap feels secure in the distributor tube. Ensure the cap does not freely fall out of the tube when held vertical. Do not overtighten the end cap or back off the screws or the cap will have to be replaced.

