




A mm (inch)

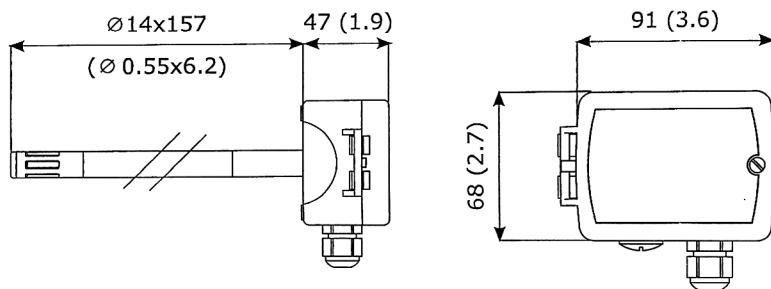


B

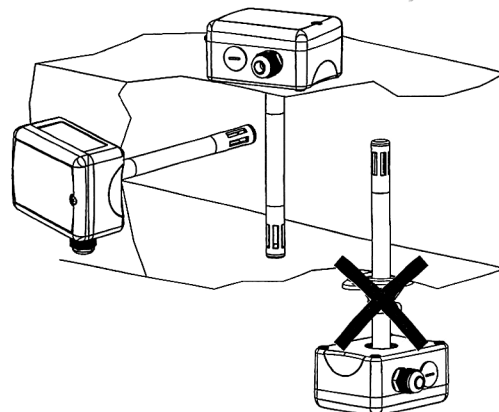


C

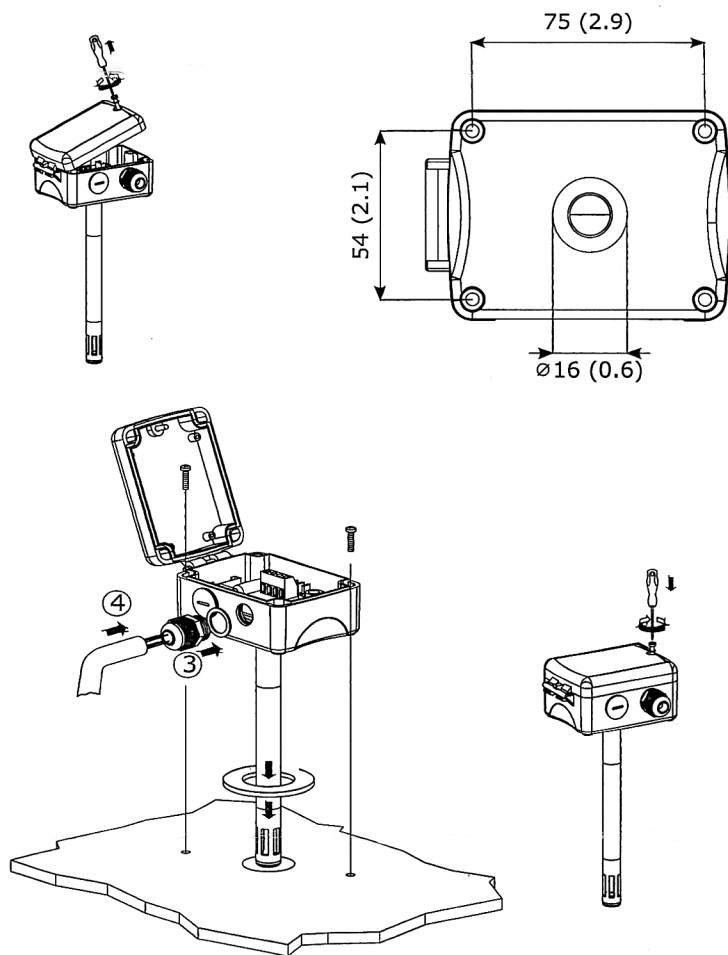


D

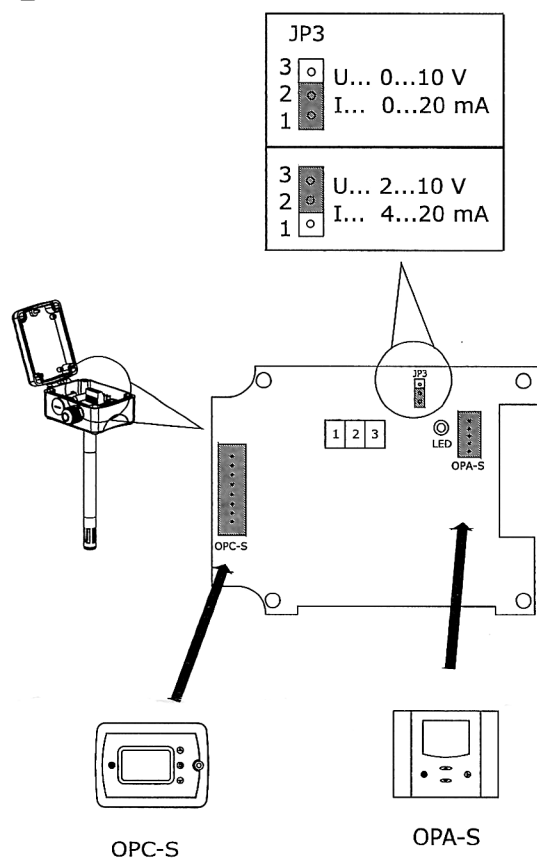


i

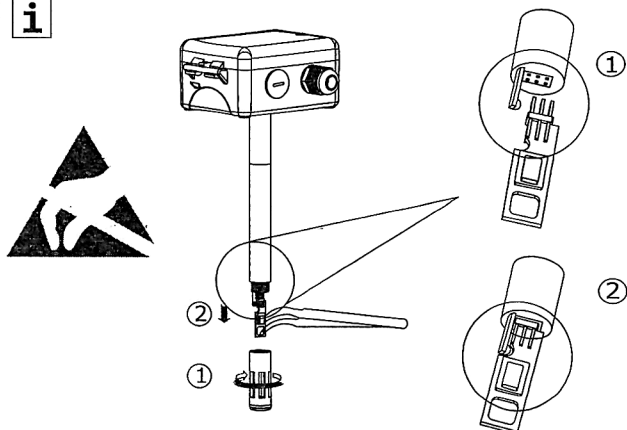

 
- 1: 0V GND
- 2: 24V AC 24 V 50-60 Hz, 24 VDC ±10%
- 3: RH 0(2)...10VDC, 0(4)...20mA




E mm (inch)

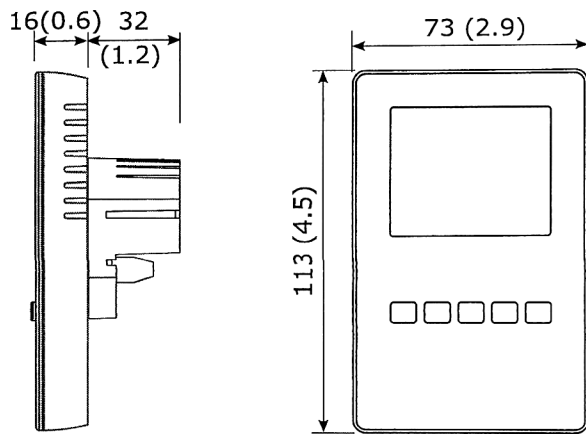


F

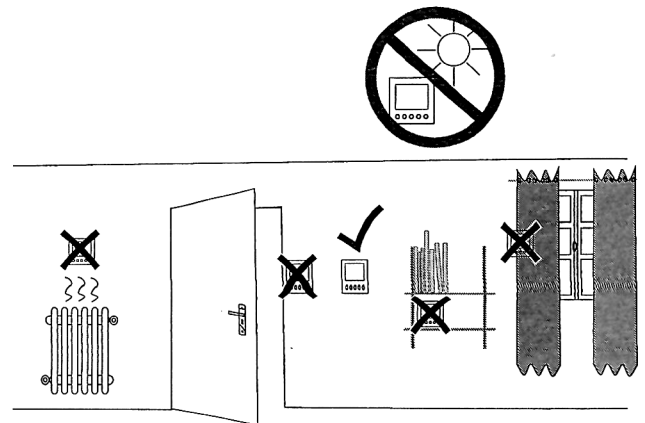


G

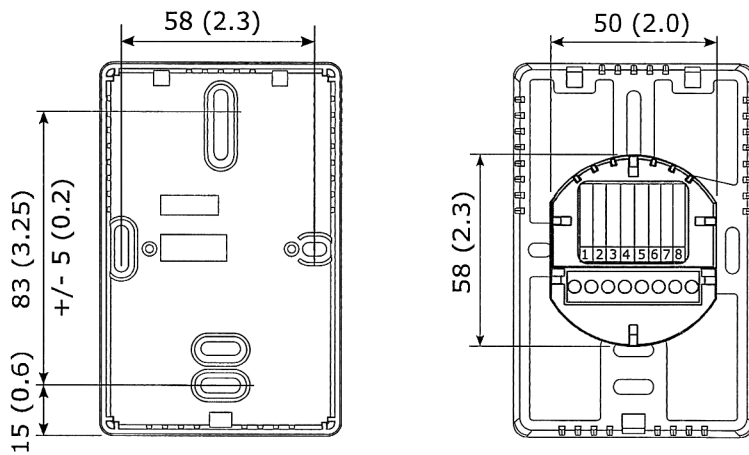


H

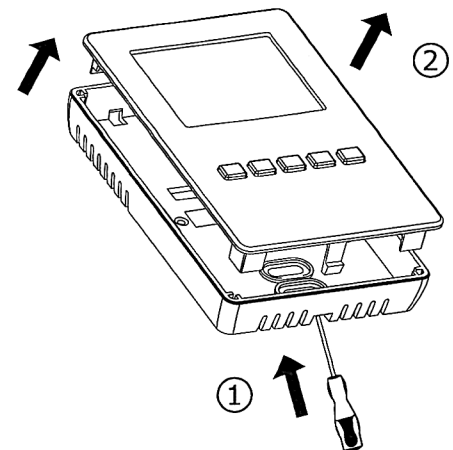

I

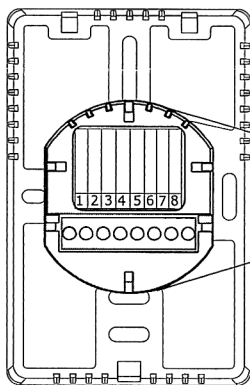

1	2	3	4	5	6	7	8
0V / GND	24V	N/A	N/A	N/A	AO 2-10V	Ext. Sens In	Temp. Reset
⊗	⊗	⊗	⊗	⊗	⊗	⊗	⊗

 

- 1: 0V / GND
- 2: 24 V AC/DC $\pm 10\%$
- 3: Do not connect
- 4: Do not connect
- 5: Do not connect
- 6: 2...10VDC
- 7: External Sensor Input
- 8: Temperature Reset



For Wiring Schematic:
Get the Condair
Sensor Connect App

