


Nortec MES2 PCB Jumper Settings

The Nortec MES2 PCB is shipped pre-configured for a specific Capacity. Prior to installing perform the following:

- Verify that the PCB Model matches the model of the Nortec MES2 unit in which it will be installed.
- Adjust (if required) Jumper J10, J13 and J26 on the new PCB so that it matches that of the old PCB.
- Adjust the jumpers for unit mains voltage and high water sensitivity based on unit voltage (see below).

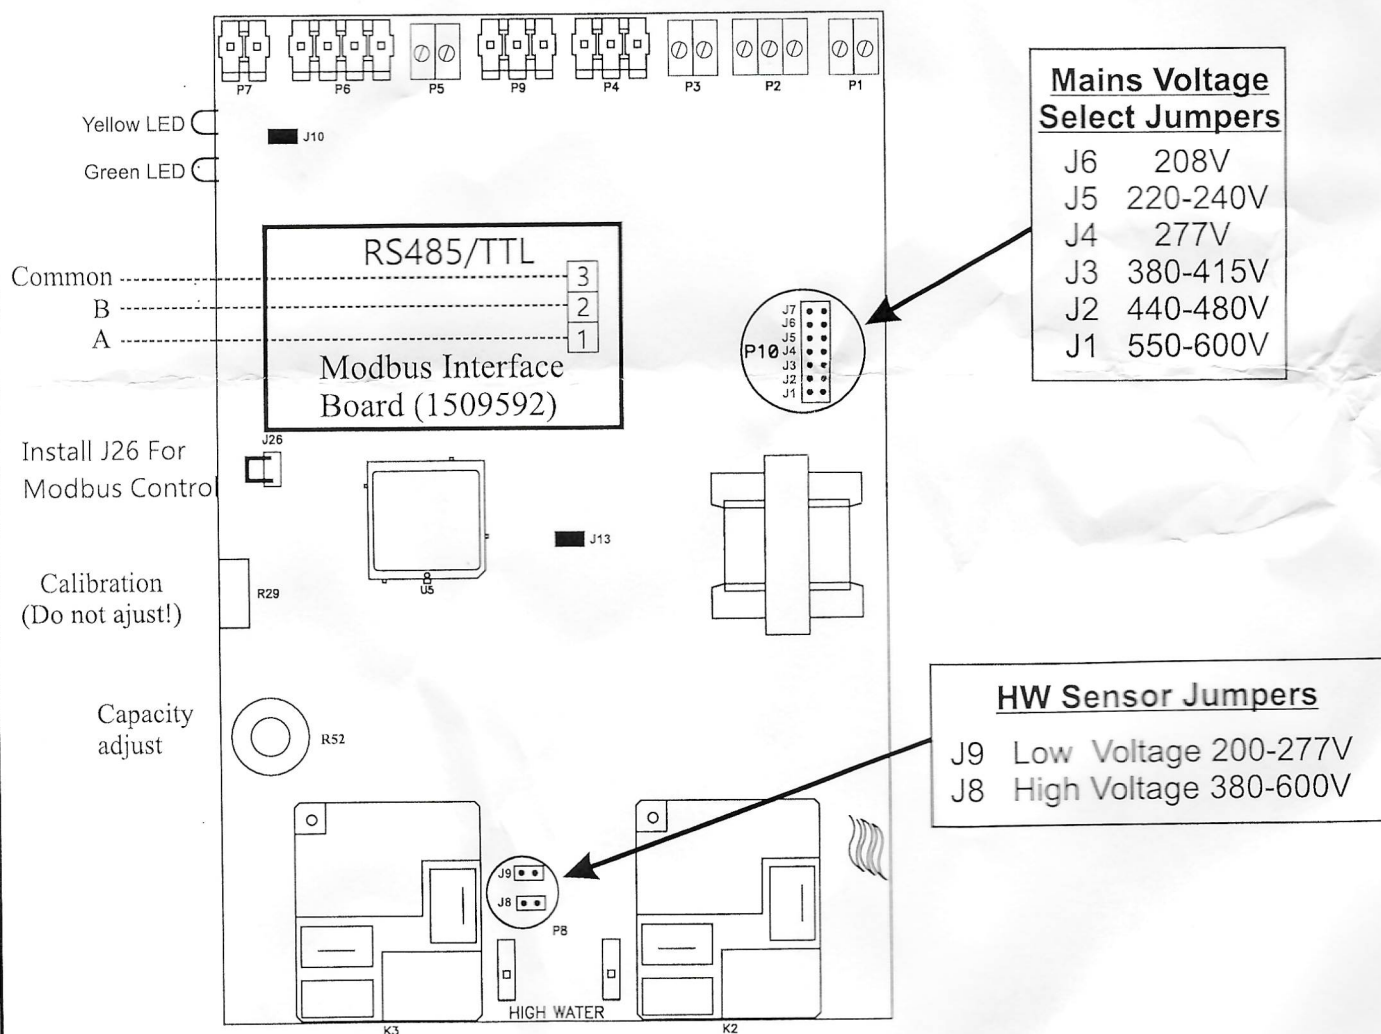

Nortec MES2 Replacement PCB Jumper settings

DIAGRAM NUMBER 2554082 Rev. B DATE 23/11/2018