
607 cylinder to 605 cylinder Field conversion kit

Field Conversion of Humidifier from 3 to 6 Electrode Wires



Conversion should only be carried out by qualified individuals

Whenever working on humidifier ensure the main disconnect is switched off and standard equipment lockout procedures are followed

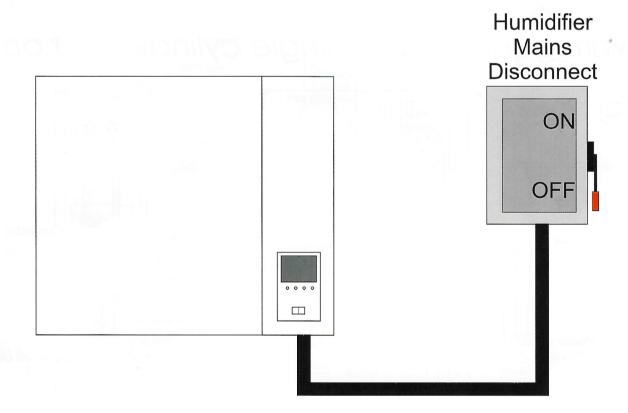



Field Conversion of Cylinders, 607 to 605 (page 1 of 5)


2571018

Revision: B


Primary wiring conversion kit - 2571019 Single cylinder or cylinder A of dual cylinder




Wiring schematic (single cylinder unit only)

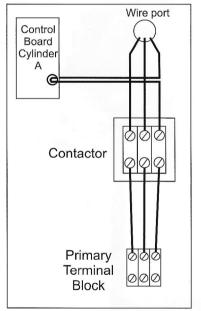



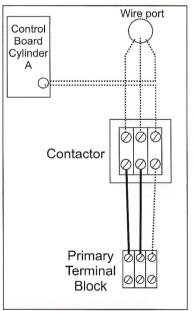



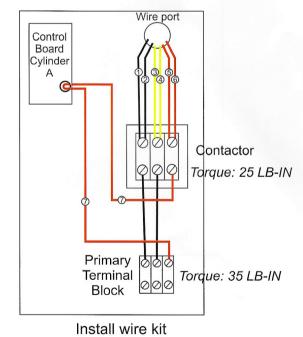





Field Conversion of Cylinders, 607 to 605 (page 2 of 5)


2571018

Revision: B

Primary wiring conversion kit - 2571020 Dual cylinder or cylinder B of dual cylinder

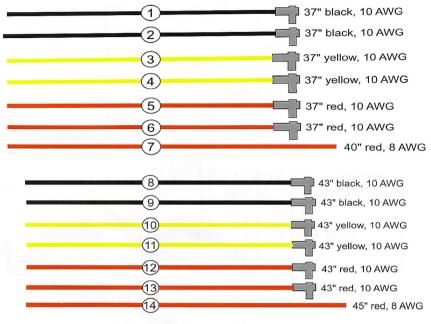

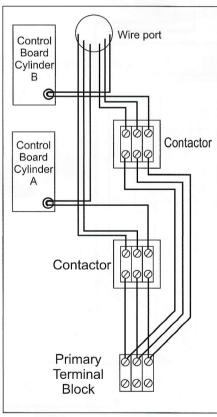

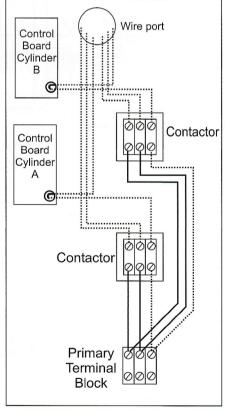

As is


Remove dotted line wires



Field Conversion of Cylinders, 607 to 605 (page 3 of 5)

2571018

Revision: B

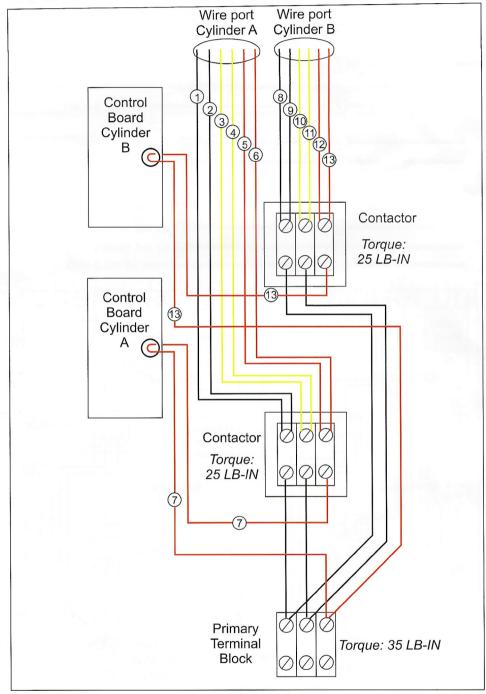

Install wire kit




Field Conversion of Cylinders, 607 to 605 (page 4 of 5)


2571018

Revision: B

Cylinder A or Single cylinder humidifier

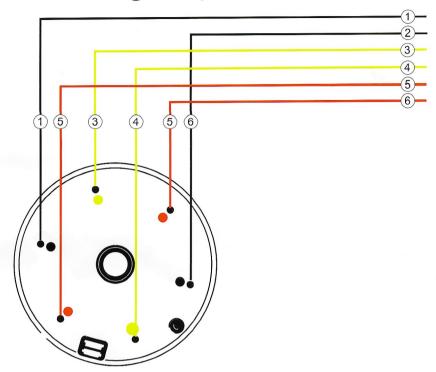

Cylinder B on double cylinder humidifier

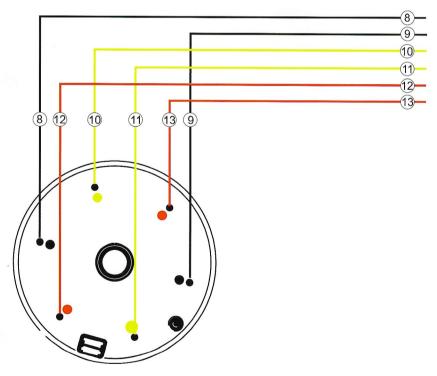



Field Conversion of Cylinders, 607 to 605 (page 5 of 5)

2571018

Revision: B