

Nortec MES2 Spare Parts

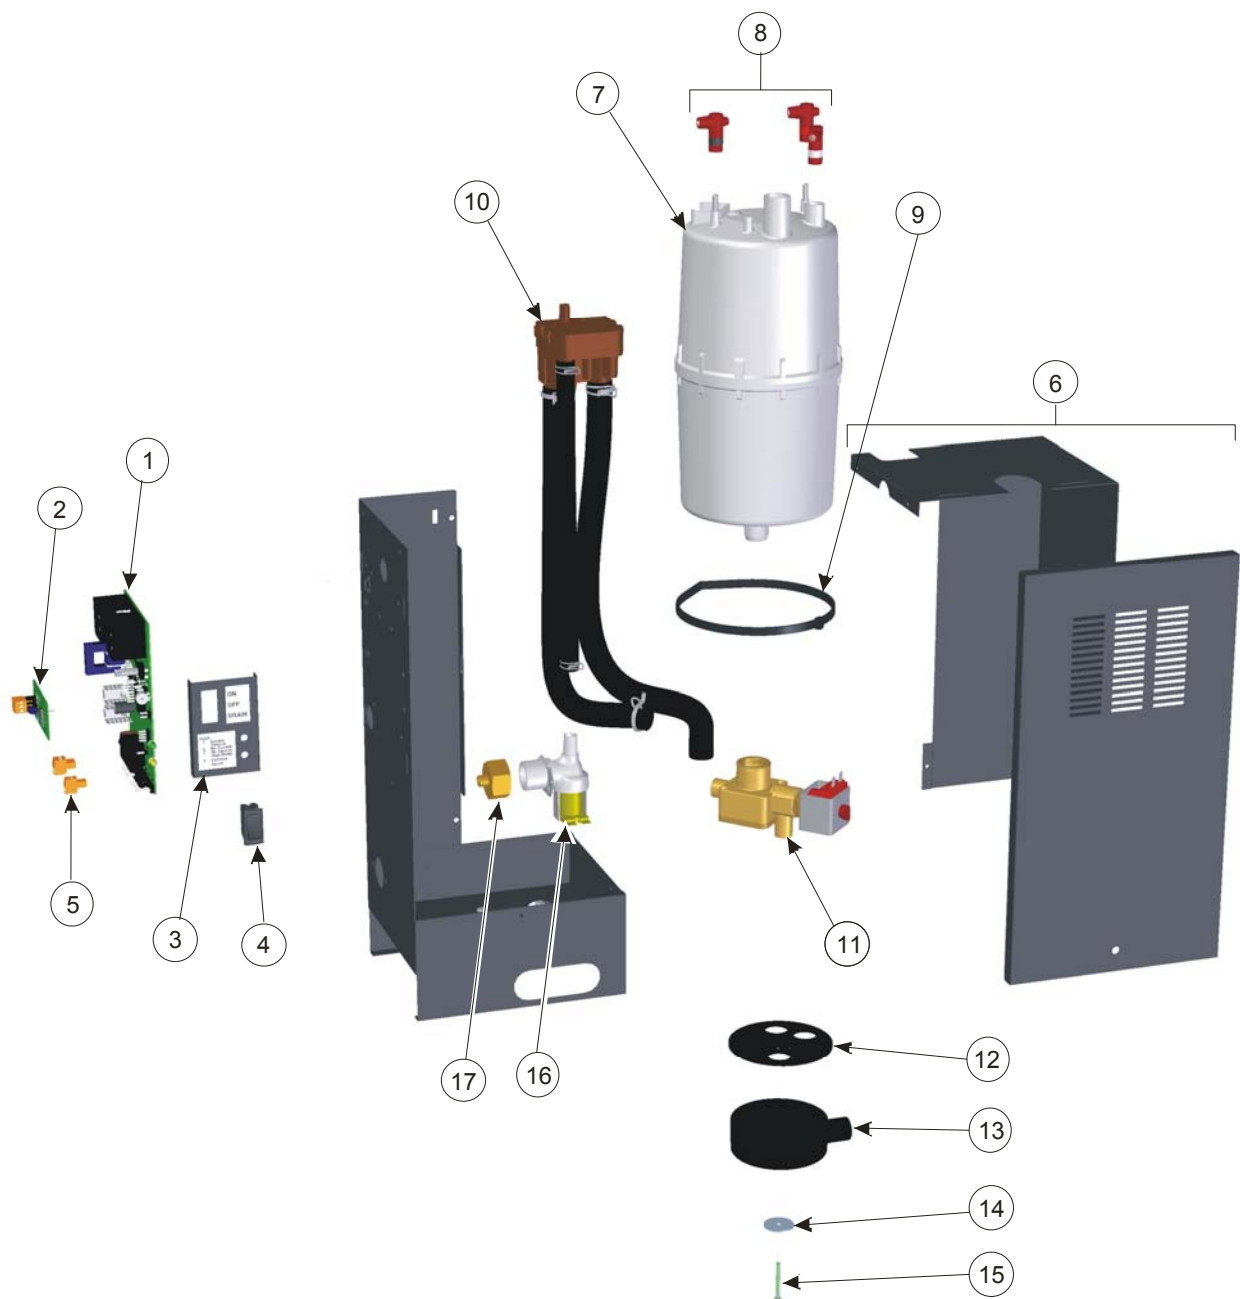


Figure 28: Nortec MES2 Spare Parts

Table 8: Nortec MES2 Spare Parts List

Item	Description	Part No.	5 lb/hr 2.3 kg/hr	10 lb/hr 4.5 kg/hr	15 lb/hr 6.8 kg/hr	20 lb/hr 9.1 kg/hr	25 lb/hr 11.4 kg/hr	30 lb/hr 13.6 kg/hr
1	PCB MES2, 208-600V, 1 PH		2554100	2554101	2554102	2554104		
	PCB MES2, 208-600V, 3 PH				2554103	2554105	2554106	2554107
2	PCB Modbus Interface	1509592	1	1	1	1	1	1
3	Switch Bracket	2554036	1	1	1	1	1	1
4	Switch Rocker SPDT	1323097	1	1	1	1	1	1
5	Connector, 2 Pole	1703972	3	3	3	3	3	3
	Connector, 3 Pole	1703973	1	1	1	1	1	1
6	Enclosed Plumbing Option	2554073	1					
		2554074		1				
		2554075			1	1		
		2554076					1	1
7	Cylinder	To order quote 3 digit number on existing cylinder, or Ser. No, Model, & Voltage						
8	Cyl. Plug Black Marker	1510046	1	1	1	1	1	1
	Cyl. Plug Red Marker	1510047	1	1	1	1	1	1
	Cyl. Plug White Marker	1510048	1	1	1	1	1	1
	Cyl. Plug Yel. Marker	1510049	1 (Three phase humidifiers only)					
9	Tie Wrap Reusable	1513003	1	1	1	1	1	1
10	SP, Fill Cup Assy 005	2595813	1					
	SP, Fill Cup Assy 005-010	2586120	1	1				
	SP, Fill Cup Assy 015-020	2595814			1	1		
	SP, Fill Cup Assy 025-030	2595815					1	1
11	Drain Valve and Coil	1456000	1	1	1	1	1	1
12	Gasket Drain Canal	1631026	1	1	1	1	1	1
13	Drain Canal Round	1102503	1	1	1	1	1	1
14	Washer Drain Canal	1325046	1	1	1	1	1	1
15	Screw #6-32x1.5	1325064	1	1	1	1	1	1
16	Fill Valve 005-020	1321061	1	1	1	1		
	Fill Valve 025-030	1321062					1	1
17	Fitting 3/4 to 1/8	1495072	1	1	1	1	1	1